中海达 RTK 把采集数据坐标点导出到电脑上

一、查看采集坐标点

①进坐标数据



②采集的坐标保存在坐标点里

坐标,	딸	放样点	控制点	
点名	•	Ν	E	
pt1	254	4603.6483	499989.2241	
pt2	254	4603.6483	499989.2241	
pt3	254	4603.6483	499989.2241	
pt4	254	4645.6340	500009.3530	
pt5	254	4633.6199	499988.9587	
pt6	254	4633.6199	499988.9587	
pt7	254	4606.7341	500002.8559	
pt8	254	4606.7341	500002.8559	
au Q 查	。 戊	4606 7241	♥ 设置	

二、从 hi-survey 软件里导出文件

①进数据交换



②选择原始数据→导出

注意:默认路劲是手薄内存\ZHD\OUT

③文件类型选择南方 CASS7.0 格式

④输入文件名 NFdat_cass

 原始数据
 放样点
 控制点

 交換类型
 ● 导出
 ● 导入

 文件目录
 /storage/sdcard0/ZHD/Out

 ご
 MFdat_04 0123.dat

 NFdat_cass
 Ø

 南方cass7.0(*.dat)
 >

 ✓ 确定

⑤点击确定



三、从手薄内存里把文件拷贝到电脑上

- ①用 USB 线连接主机
- ②手薄上打开 USB 储存



③电脑上会显示两个可移动磁盘,



④进 hi-survey 数据导入导出默认路径

ŀ	手薄 (G:)	Þ	ZHD	۲	Out

⑤把导出文件 NFdat_cass. dat 拷贝到电脑上拷贝到



导出格式支持自定义.txt、自定义.csv、excel 文件.csv、CAD 格式.dxf 等多种格式

中海达昆明 RTK\全站仪培训资料下载网盘: http://zhdkm.ys168.com/